

Tastaturkommandos für die Bedienung der Cocktailaudio-Geräte (Ab R1529)

Keyboard	Fernbedienung	Keyboard	Fernbedienung
ALT-P	POWER	ALT-K	Clock
ALT-I	i-Service	ALT-D	INPUT
CTL-A	Radio	ALT-N	DAB
ALT-F	FM	ALT-X	SCREEN
ALT-U	SETUP	CTL- 0~9	0 ~ 9
ALT-A	CAP/NUM	ALT-Z	LYRICS
ALT-Q	TEXT/ART	CTL-PAGE UP	PREVIOUS
CTL-PAGE DOWN	NEXT	ALT-LEFT	SEEK -15
ALT-RIGHT	SEEK +15	ALT-C	BlueTooth(x14), RIP(Other model)
ALT-L	PLYLIST	ALT-J	AD MY PL
ALT-O	MY PL	ALT-S	SORT
ALT-H	SORT	ALT-F	FONT SIZE
ALT-T	TAG EDIT	ALT-W	SLEEP
ALT-E	EJECT	ALT-R	RED
ALT-G	GREEN	ALT-Y	YELLOW
ALT-B	BLUE	ALT-S	SORT
ALT-H	SORT	CTL-D	CD PLAY/RIP
CTL-B	BROWSER	CTL-R	GO TO TOP(ROOT)
CTL-M	MUSIC DB	ALT-V	VOL BAL
F1	INFO	F2	MUTE
F3	VOL-	F4	VOL+
F5	PLAY/PAUSE	F6	STOP
F7	REC	F8	NOW PLAYING
F9	SEARCH	F10	MENU
F11	BOOKMARK	F12	FAVORITE
HOME	HOME	ESC	RETURN
PAGE UP	PAGE UP	PAGE DOWN	PAGE DOWN
ARROW KEYS	ARROW KEYS	ENTER	OK

* Hinweis: Für "CTL- 0~9, nutzen Sie bitte den Zahlenblock rechts von der Tastatur